


Number DRLRA010030 Model GR YARIS GXPA16

Use of the sponges is recommended


When the radiator is installed on the fan shroud, there will be a gap above and below the product. Please use the included sponges in order to prevent the airflow from escaping.

Please fit the included sponges (shown in yellow here) along the sides of the core support.

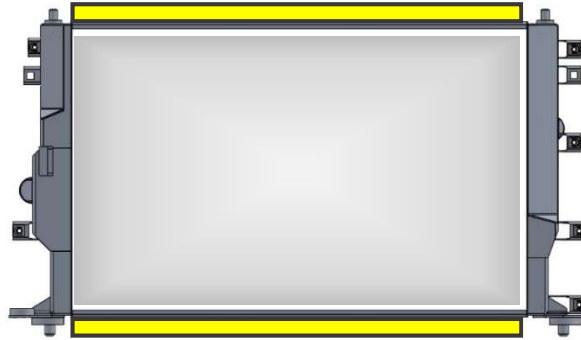

Without sponges

When the product is installed without the sponges, the airflow escapes through the gap.

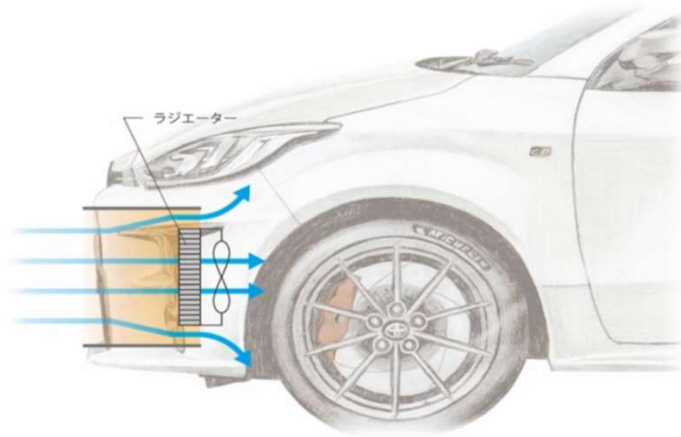

With sponges

When the core support is fitted with the sponges and installed on the fan shroud, the gaps are sealed, preventing the airflow from escaping.

